

THUMPA® PNEUMATIC STAR® POST DRIVER



IT PACKS A SERIOUS PUNCH

Drive Waratah® steel posts into most terrain faster and with ease using the air powered Thumpa pneumatic Star post driver.

Application

The driver has been designed to drive Waratah steel posts into the ground, reducing physical effort and increasing the number of posts that can be installed per hour.

The Thumpa pneumatic post driver can be used to install the following posts:

- GalStar Extreme®, GalStar Plus®, GalStar Utility® and OneSteel black Star posts
- GalStar MaxY®
- Gripfast® trellis posts*
- Ezyslot® strainer posts^

Suggested air compressor requirements

| Application | DISP CFM | DISP L/M | FAD L/M | НР | Tank size (ltr) | Efficiency rating |
|---------------------------|----------|----------|---------|----|-----------------|-------------------|
| Light or intermittent use | 25 | 700 | 520 | 7 | 120 | 50-80% |
| Heavy or constant use | 37 | 1000 | 820 | 10 | 150 | 80-100% |

DISP = Displacement; CFM = Cubic feet per minute; L/M = Litres per minute;

FAD = Free air delivery; HP = Horsepower

^ With optional Ezyslot guide - purchased separatel




^{*} With optional Gripfast trellis post guide - purchased separately

Features & Benefits

- Pneumatically driven (air operated) -
- Compressed air operates the striking dolly inside the driver.
- Far less physical labour required as the driver does all the hard work for you.
- Faster than manual drivers which means you can install more posts in less time.
- 12 months Warranty*
- Waratah will repair or replace any fault in workmanship for a period of 12 months from the purchase date.



- Reinforced gusseted handles with incorporated lifting lug^t
- Can be attached to a mechanically assisted device on your vehicle to reduce manually lifting the driver on and off posts.
- Quick change guide system
- Insert the inner guide for standard GalStar® posts, or remove it to drive GalStar MaxY posts.

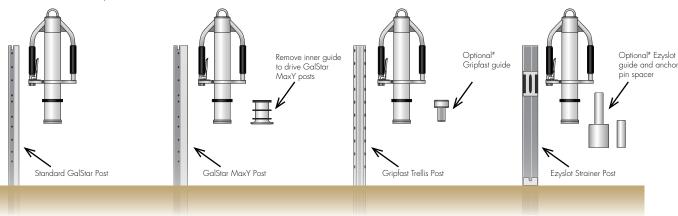

INSTALLATION



1. With the inner guide fitted you can drive 2. Stand up the post and position it so that standard GalStar posts. For GalStar MaxY posts, unlock and remove the inner guide.



its longest stalk (with the holes punched in it) is facing the inside of the paddock, for maximum post strength.



3. Lightly tap the post into the ground. Place the Thumpa on top of the post. Hold onto the handles and depress the trigger. Complete driving to desired depth/post height as per your fence line.

TOOLS AND ACCESSORIES



- Thumpa Ezyslot guide and anchor pin spacer
- Thumpa Gripfast trellis post guide
- GalStar post caps and GalStar MaxY post caps
- Star post clips to attach wire to GalStar posts

DON'T FORGET SAFETY













Phone 13 10 80 or visit www.onesteelwaratah.com.au

