

# WARATAH®

FIRST - BECAUSE IT LASTS.

## THUMPA® PNEUMATIC STAR® POST DRIVER



## IT PACKS A SERIOUS PUNCH

Drive Waratah Star posts into most terrain faster and with ease using the air powered Thumpa pneumatic Star post driver.

### Application:

The driver has been designed to drive Waratah Star posts into the ground, reducing physical effort and increasing the number of posts that can be installed per hour.

### The Thumpa pneumatic post driver can be used to install the following posts:

- JiO® Star, JiO MaxY® posts
- GalStar® Extreme®, GalStar MaxY and InfraBuild black Star posts
- Gripfast® trellis posts\*
- Ezypipe® & Ezyslot® strainer posts^
- 100NB pipe#

### Suggested air compressor requirements

Application	DISP CFM	DISP L/M	FAD L/M	HP	Tank size (ltr)	Efficiency rating
Light or intermittent use	25	700	520	7	120	50-80%
Heavy or constant use	37	1000	820	10	150	80-100%

DISP = Displacement; CFM = Cubic feet per minute; L/M = Litres per minute;  
FAD = Free air delivery; HP = Horsepower

^ With optional Thumpa Ezyslot & Ezypipe guide - purchased separately

# With optional Thumpa 120mm OD Pipe guide - purchased separately

\* With optional Gripfast trellis post guide - purchased separately


**WARATAH®**  
FIRST - BECAUSE IT LASTS.

## FEATURES & BENEFITS

- **Pneumatically driven (air operated)**
  - Compressed air operates the striking dolly inside the driver.
  - Far less physical labour required as the driver does all the hard work for you.
  - Faster than manual drivers which means you can install more posts in less time.
- **12 months Warranty\***
  - Waratah will repair or replace any fault in workmanship for a period of 12 months from the purchase date.



- **Reinforced gusseted handles with incorporated lifting lug†**
  - Can be attached to a mechanically assisted device on your vehicle to reduce manually lifting the driver on and off posts.
- **Quick change guide system**
  - Insert the inner guide for standard Star® posts, or remove it to drive MaxY® posts.

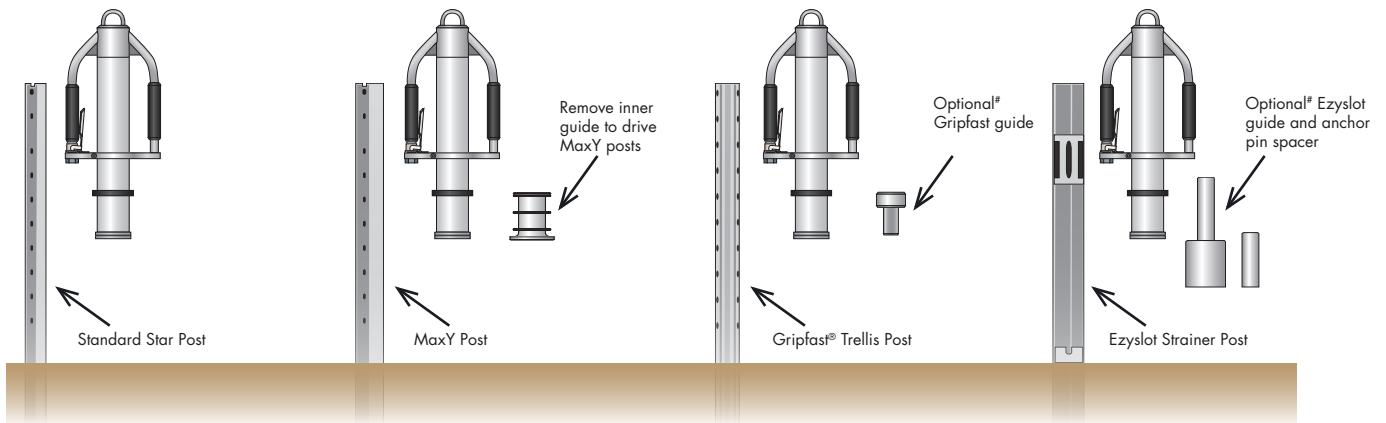

## INSTALLATION



1. With the inner guide fitted you can drive standard Star posts. For MaxY posts, unlock and remove the inner guide.
2. Stand up the post and position it so that its longest stalk (with the holes punched in it) is facing the inside of the paddock, for maximum post strength.
3. Lightly tap the post into the ground. Place the Thumpa on top of the post. Hold onto the handles and depress the trigger. Complete driving to desired depth/post height as per your fence line.

## TOOLS AND ACCESSORIES

- Thumpa Ezyslot/Ezypipe guide & anchor pin
- Thumpa 120mm OD pipe guide
- Thumpa Gripfast trellis post guide
- Star post caps and MaxY post caps
- Star post clips - to attach wire to Star posts

### DON'T FORGET SAFETY



Phone 13 10 80 or visit [www.waratahfencing.com.au](http://www.waratahfencing.com.au)

\*Conditions apply. †Registered design number 324786. # Purchased separately. © TM Registered trademark or trademark of InfraBuild Wire Pty Limited, Ingall Street, Mayfield, NSW 2304 ABN 59 000 010 873. 1009 B50328

**WARATAH®**  
FIRST - BECAUSE IT LASTS.